



## Ash Data Writing Procedure

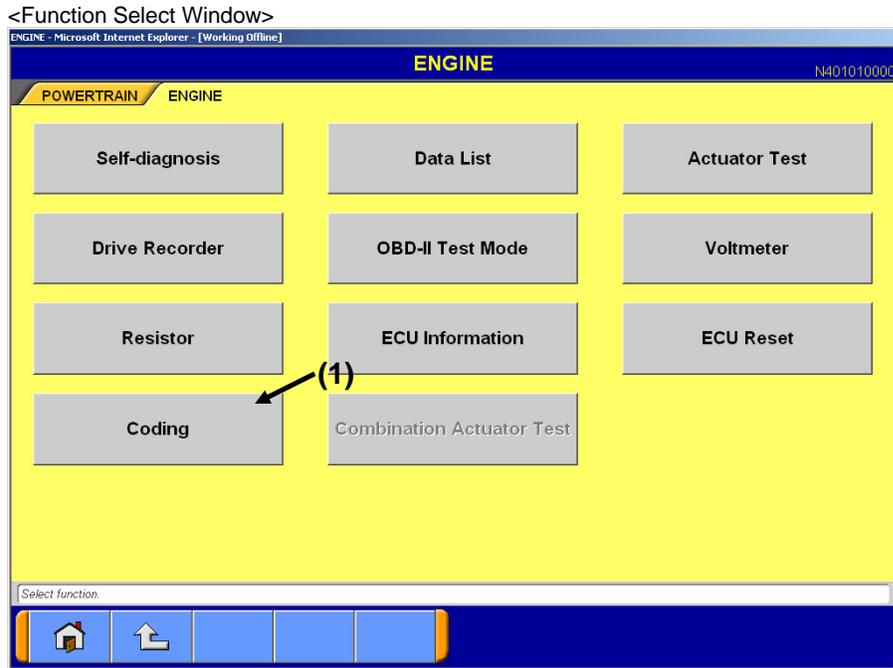

Window 1


- Press "Coding" button (Window 1: (1)) in Function Select Window to proceed to the Coding Menu Window (Window 2).

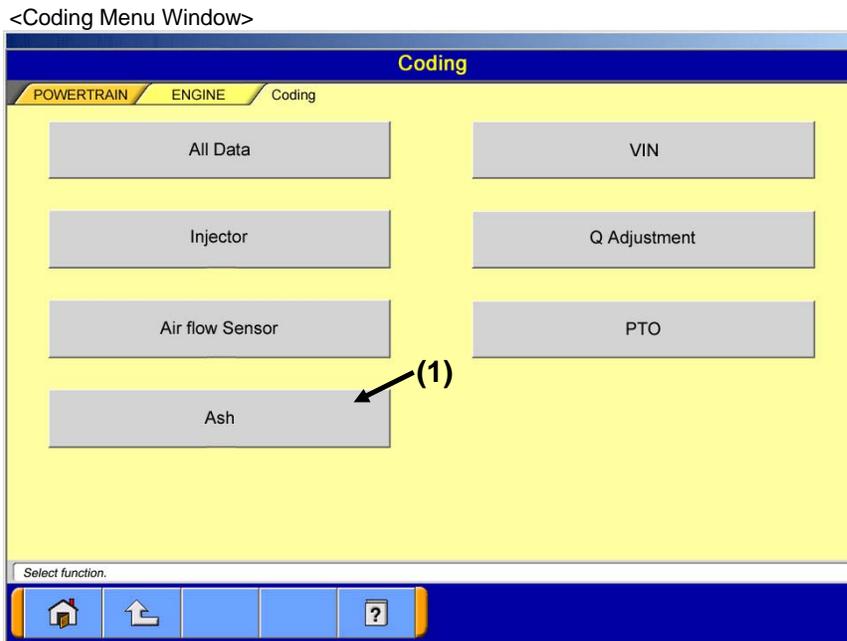

Window 2

- Press "PTO" button (Window 2: (1)) to proceed to the Coding Submenu Window (Window 3).

<Coding Submenu Window>

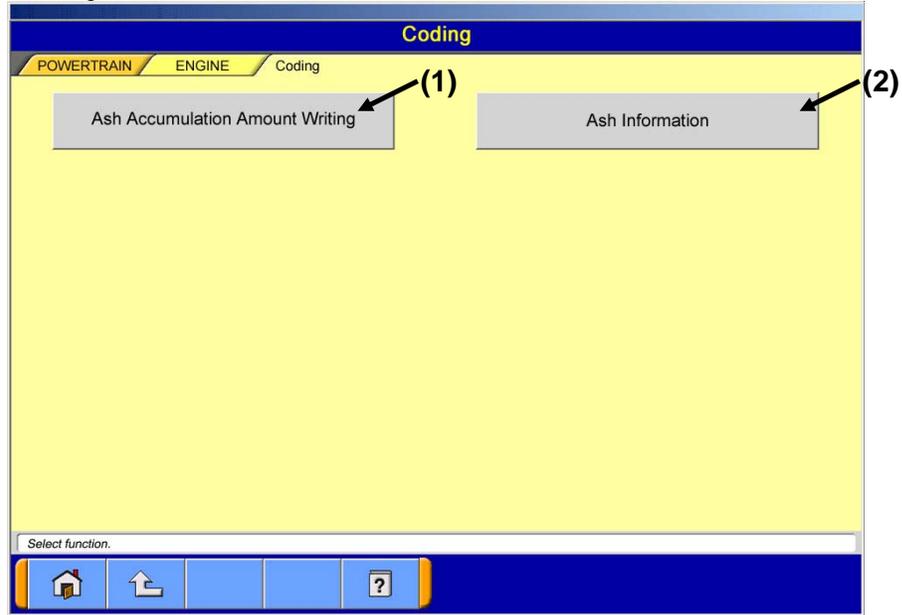


Window 3

· Press Function button to proceed to the following windows.

Function button name	Next Window	Remarks
Ash Accumulation Amount Writing (Window 3: (1))	Password Input Window (Window 4)	Write "Ash data" manually/ automatically.
Ash Information (Window 3: (2))	PTO Information Display Window (Window 13)	Confirm the Ash information (Ash data) written in MUT.


<Password Input Window>

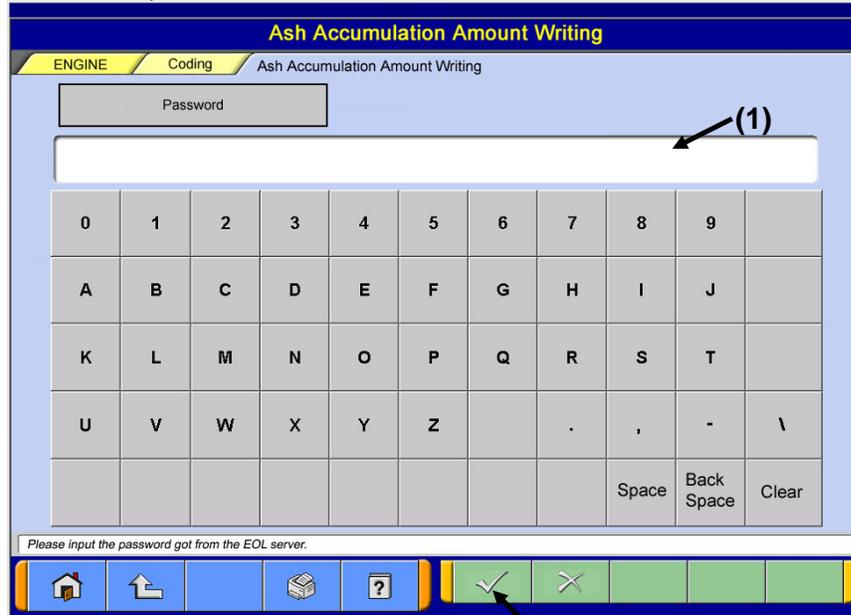

Window 4

- Enter password in Password Input field (Window 4: (1)) from the keyboard of MUT screen or PC main unit.
- Press OK button (Window 4: (2)) to proceed to the Inquiry Number Input Window (Window 5).


<Inquiry Number Input Window>

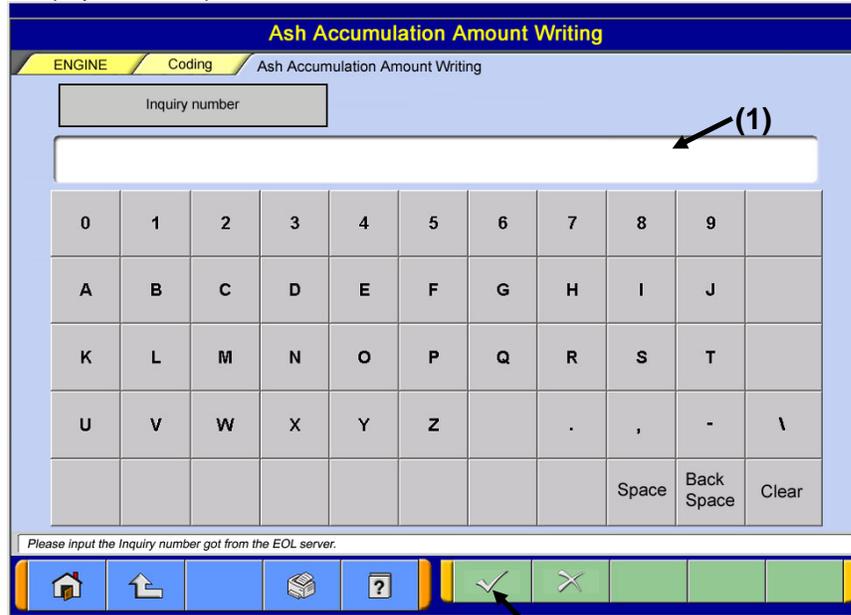

Window 5

- Enter Inquiry Number in Inquiry Number Input field (Window 5: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 5: (2)) to proceed to the Data Input Method Select Window (Window 6).

<Data Input Method Select Window>

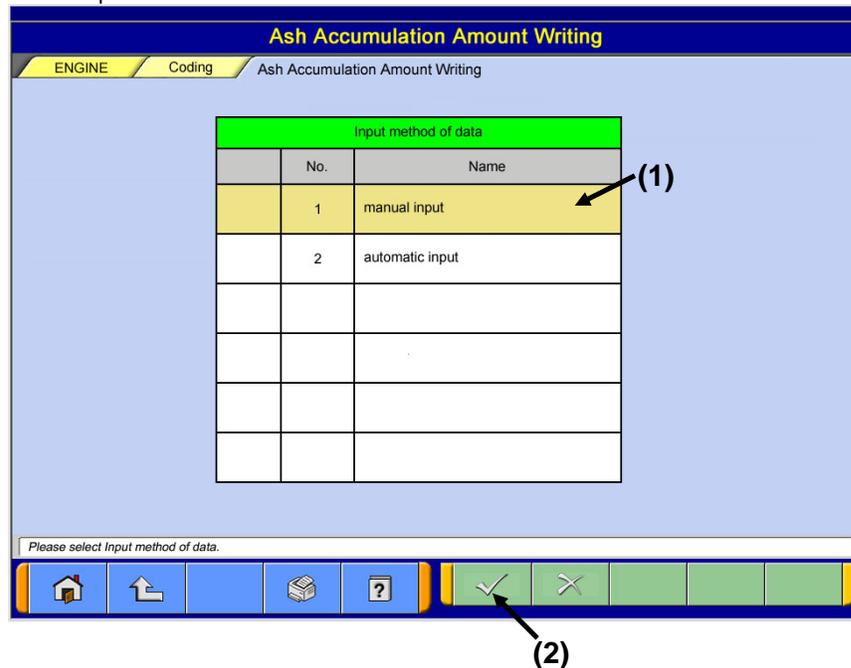


Input method of data	
No.	Name
1	manual input
2	automatic input

Window 6

- Select "Manual input" (Window 6: (1)) and press OK button (Window 6: (2)) to proceed to the Coding Data Input Window (Window 7).

<Coding Data Input Window>

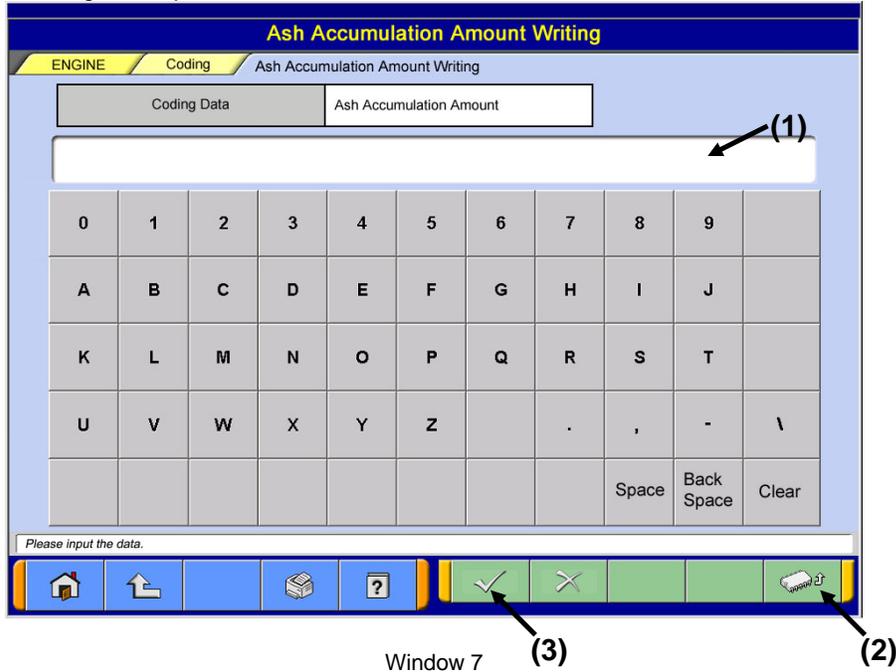


<To write data which is read from ECU>

- Press "Read" button (Window 7: (2)) to read Ash data from ECU after the confirmation window \*1 is displayed and to display the data in the Coding Data Input field (Window 7: (1)).
  - \*1: Check if the ECU before replacement is connected.
- Press OK button (Window 7: (3)) to proceed to the Work Memo Input Window (Window 8).

<To write Ash data by manually entering memo value>


- Enter the memo "Ash data" which is read from ECU before replacement in the Coding Data Input field (Window 7: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 7: (3)) to proceed to the Work Memo Input Window (Window 8).

<Work Memo Input Window>

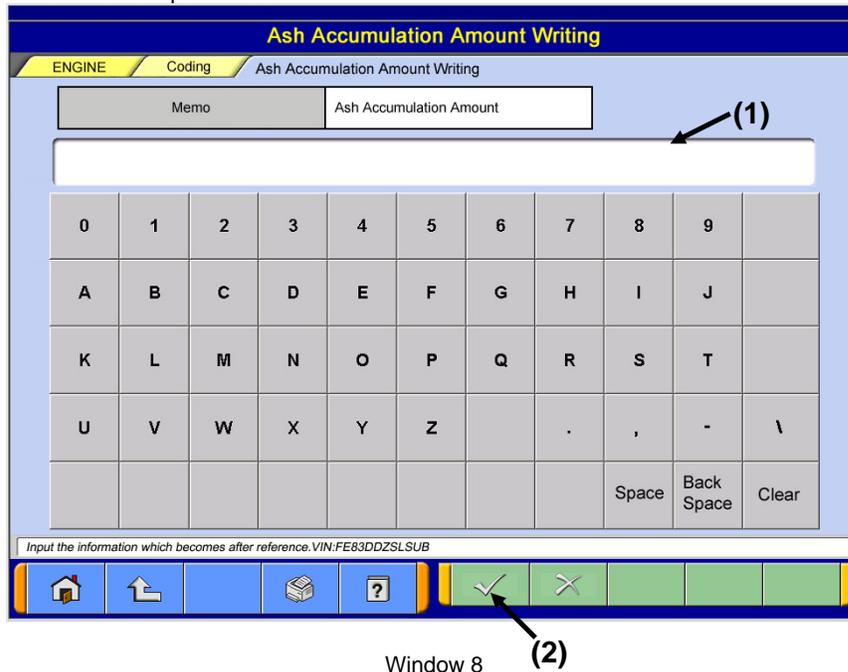

- Enter memo in the Work Memo Input field (Window 8: (1)) from the keyboard of MUT Screen or PC main unit. (It can be left blank)
- Press OK button (Window 8: (2)) to proceed to the Coding Contents Confirmation Window (Window 9).

<Coding Contents Confirmation Window>

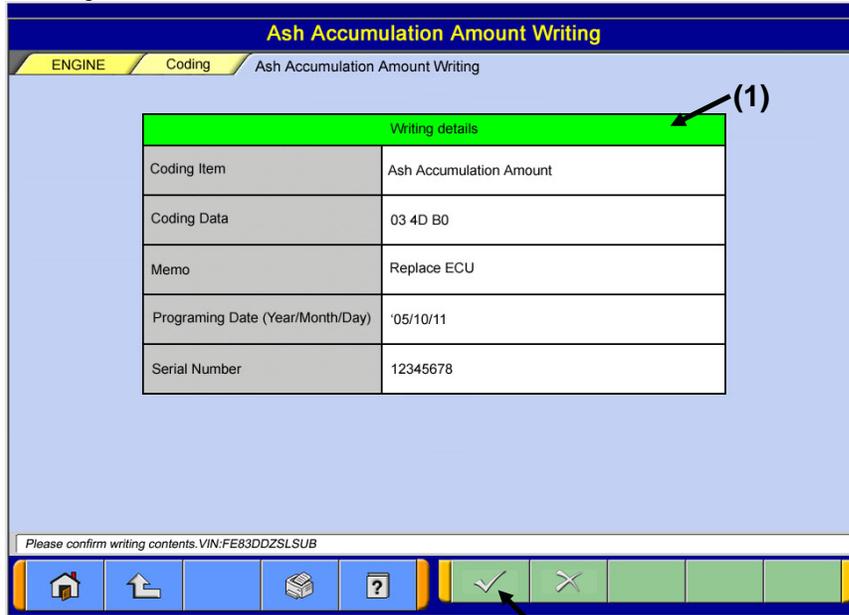


Window 9 (2)

- Confirm the writing contents (Window 9: (1)) and press OK button (Window 9: (2)) to display the Now Writing Window (Window 10) after Writing Contents Writing Window \*1 is displayed.

\*1: Confirm if it is replaced with a new ECU.


<Now Writing Window>

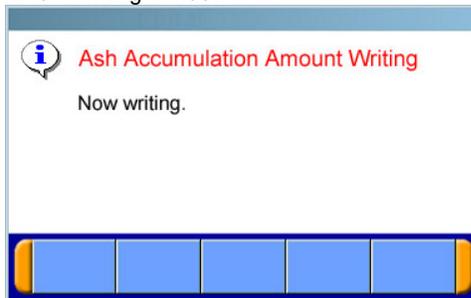

Window 10

- When writing is completed, Writing Complete Window (Window 11) is displayed.


<Writing Complete Window>

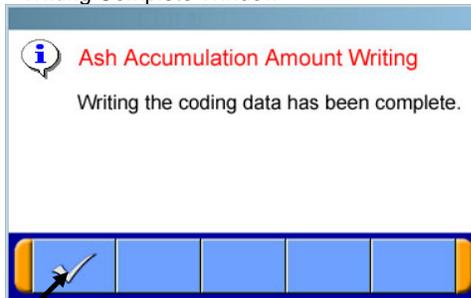

(1) Window 11

- Press OK button (Window 11: (1)) to proceed to the Result Display Window (Window 12).


<Result Display Window>

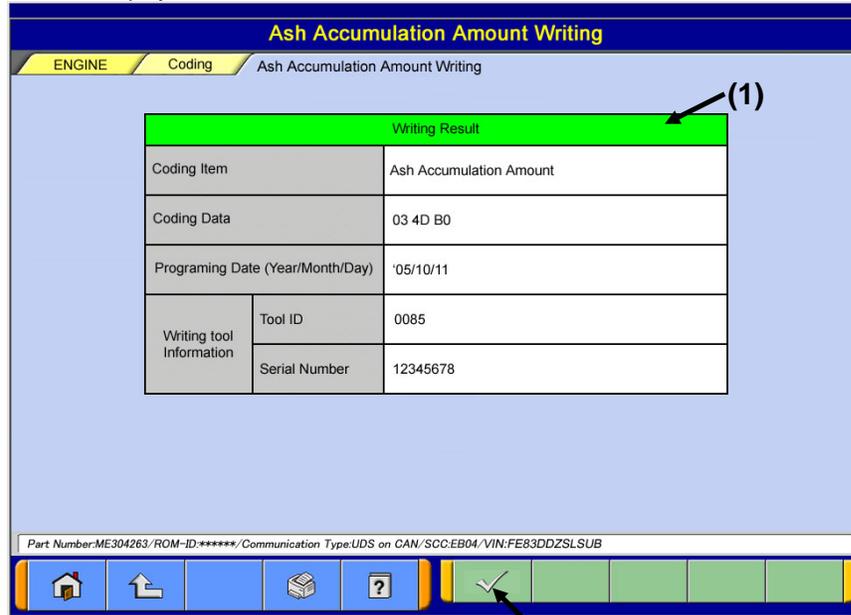

Window 12

- Writing result is displayed in Writing Result Window (Window 12: (1)).
- Press OK button (Window 12: (2)) to return to the Coding Submenu Window (Window 3).

<Ash Information Display Window>

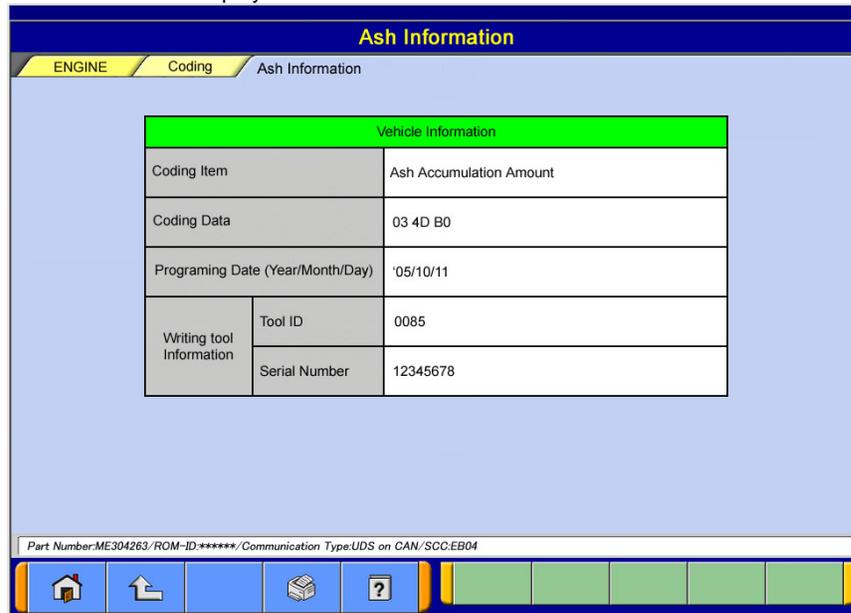

Window 13

- The "Ash data" value which is written in ECU is displayed.