



Correction Data Writing Procedure when Injector is replaced

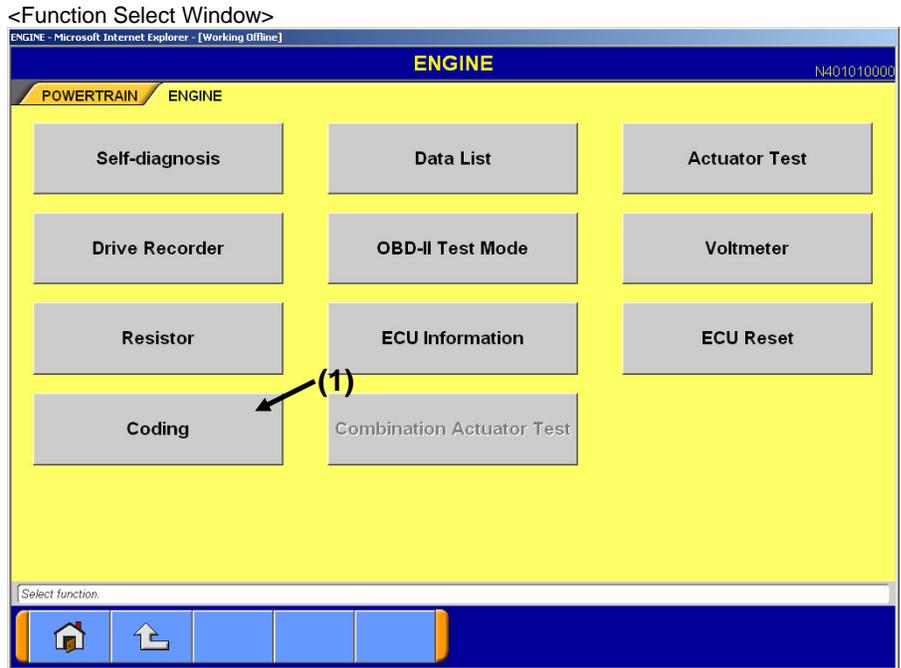


Window 1

- Press "Coding" button (Window 1: (1)) to proceed to the Coding Menu Window (Window 2).

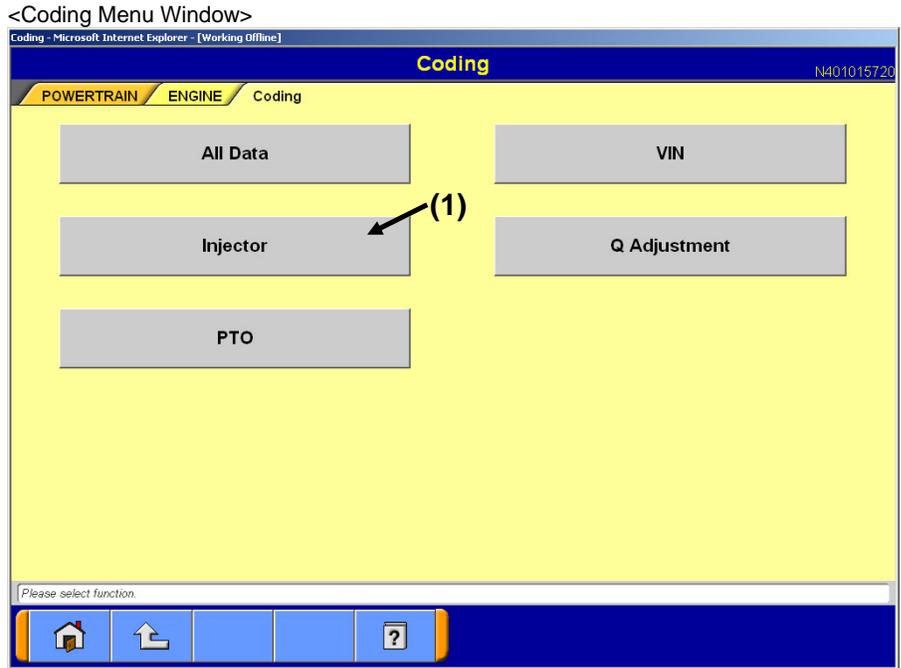

Window 2


- Press "Injector" button (Window 2: (1)) to proceed to the Coding Submenu Window (Window 3).

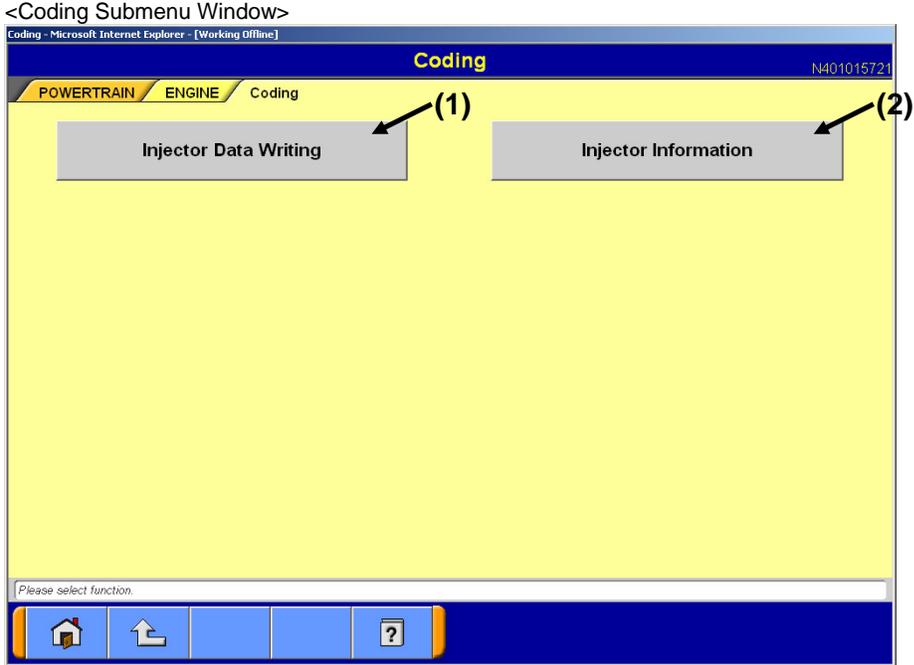

Window 3


· Press each Function button to proceed to the following windows.

Function button name	Next Window	Remarks
Injector Data Writing (Window 3: (1))	Password Input Window (Window 4)	Write "correction data" of each injector.
Injector Information (Window 3: (2))	Injector Information Display Window (Window 14)	Confirm the injector information which is written in ECU (correction data, etc.)

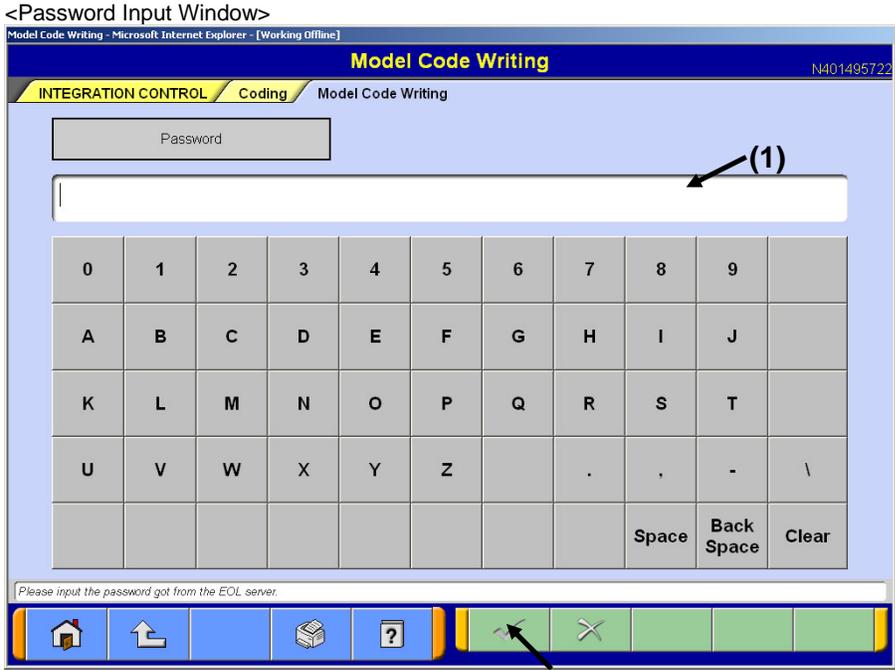


Window 4

- Enter password obtained from EOL server in Password Input field (Window 4: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 4: (2)) to proceed to the Inquiry Number Input Window (Window 5).

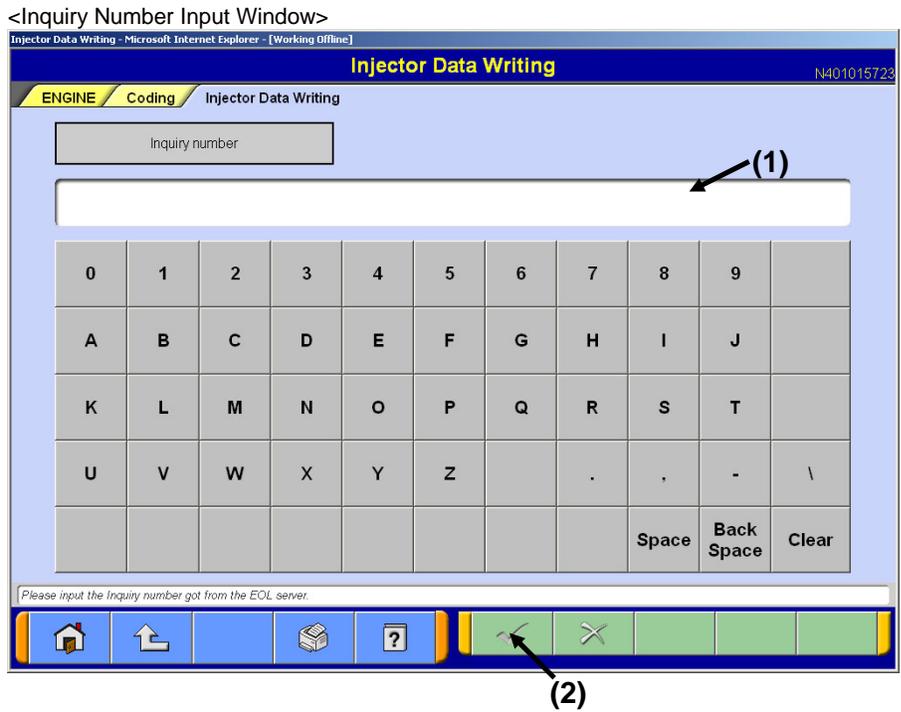


Window 5

- Enter inquiry number obtained from EOL server into Inquiry Number Input field (Window 5: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 5: (2)) to proceed to the Data Input Method Select Window (Window 6).

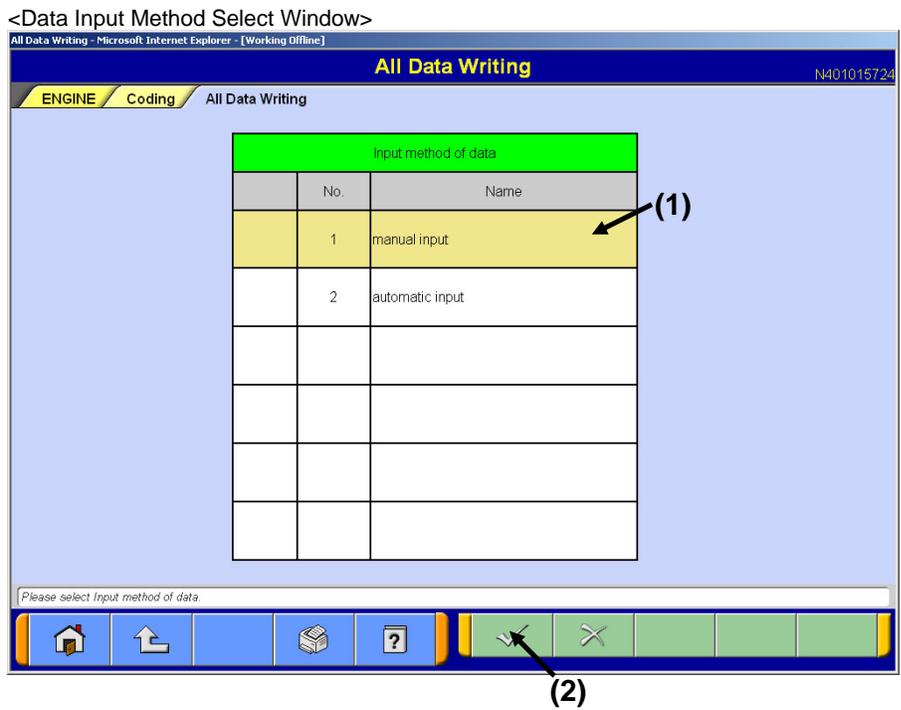


Window 6

- Select "Manual Input" (Window 6: (1)) and press OK button (Window 6: (2)) to proceed to the Injector Select Window (Window 7).

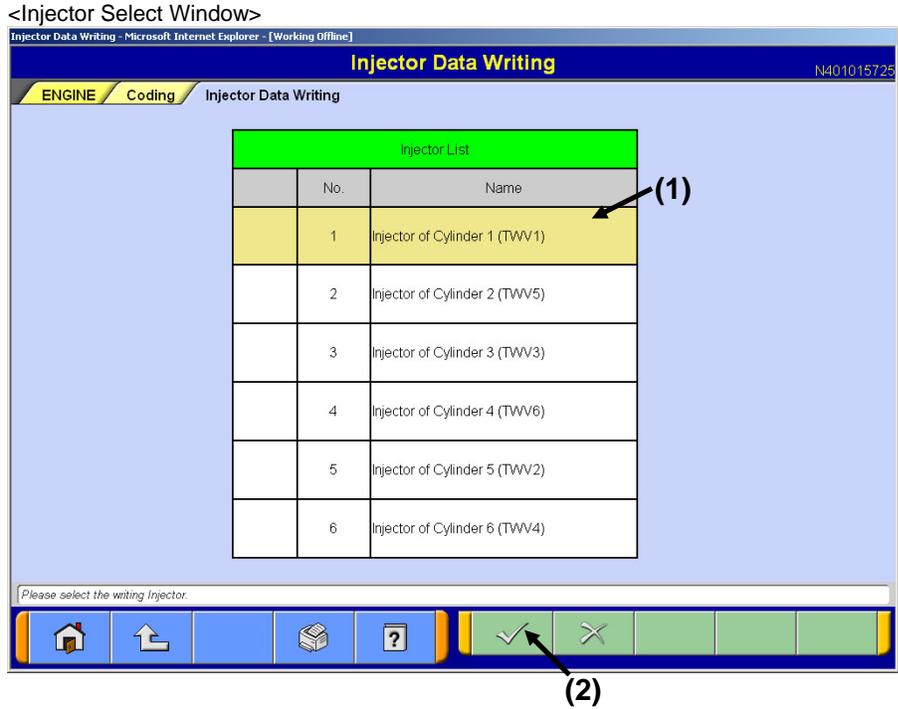


Window 7

- Select injector to which correction data is written from Injector List (Window 7: (1)).
- Press OK button (Window 7: (2)) to proceed to the Coding Data Input Window (Window 8).

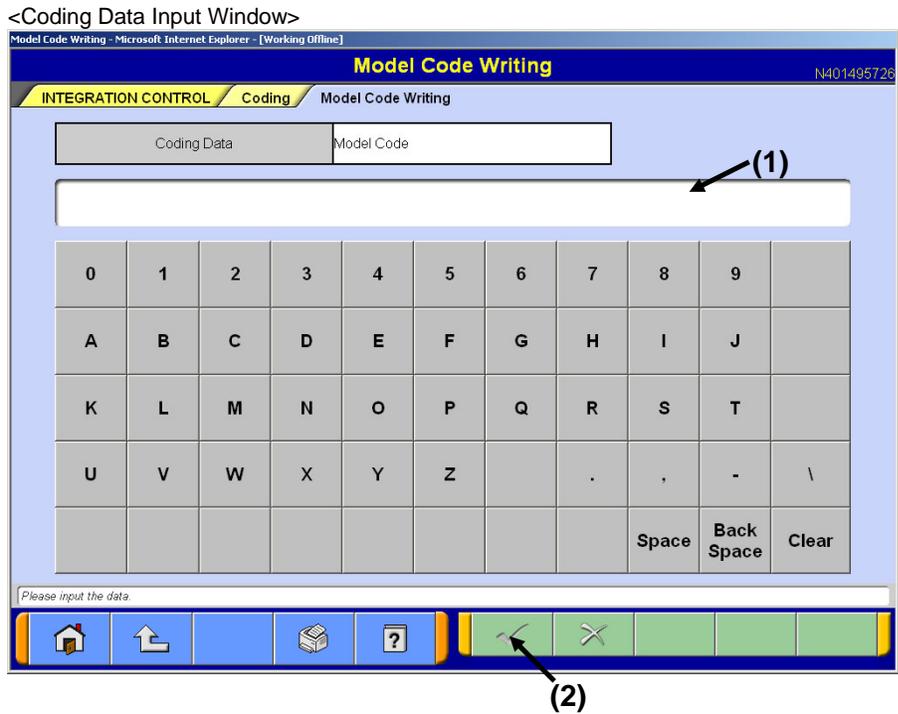


Window 8

- Enter "correction data" which is described in Injector into Coding Data Input Field (Window 8: (1)) (4M: 6 digits, 6M: 30 digits) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 8: (2)) to proceed to the Work Memo Input Window (Window 9).

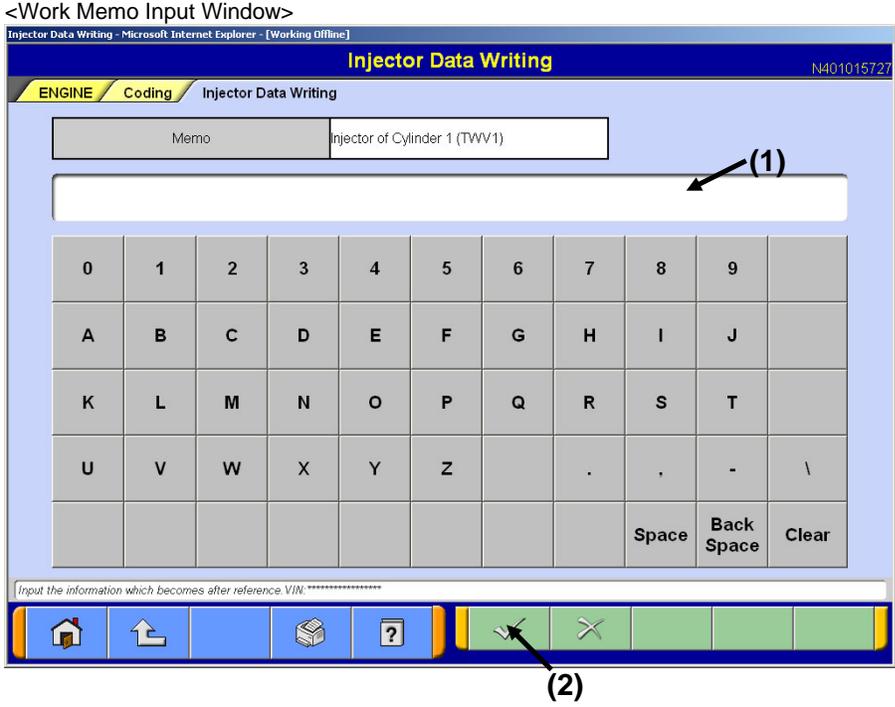


Window 9

- Enter memo for reference into Work Memo Input field (Window 9: (1)) from the keyboard of MUT Screen or PC main unit. (As the input is optional, it can be left blank.)
- Press OK button (Window 9: (2)) to proceed to the Coding Contents Confirmation Window (Window 10).

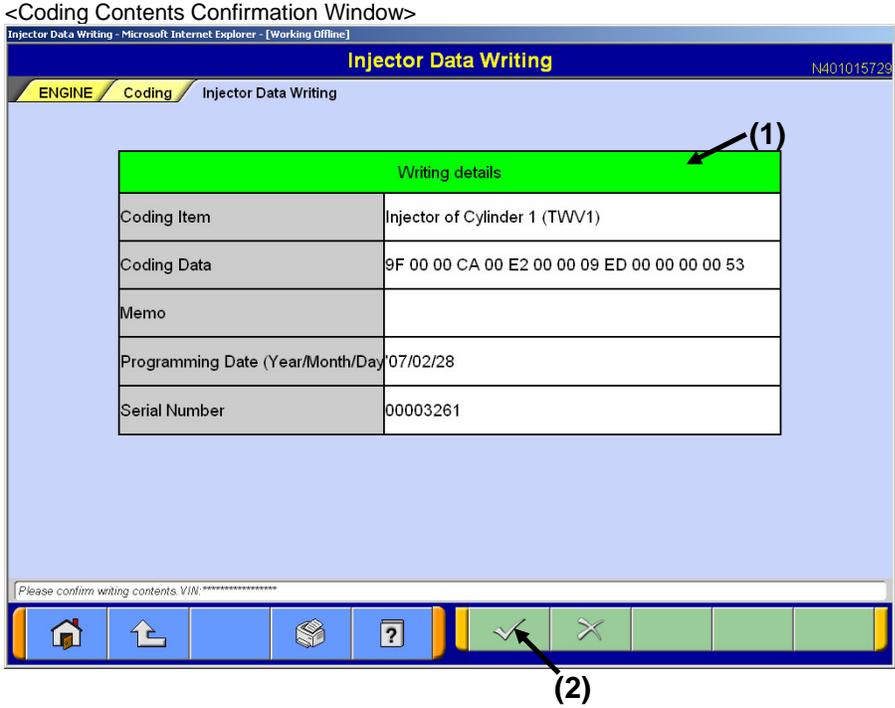


Window 10

- Confirm the writing contents (Window 10: (1)) and press OK button (Window 10: (2)) to proceed to the display Now Writing Window (Window 11) after Writing Confirmation Window is displayed.

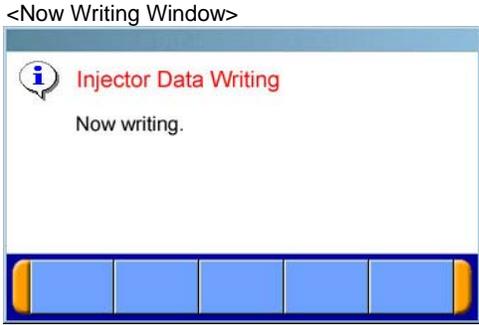


Window 11

- After writing is completed, Writing Complete Window (Window 12) is displayed.

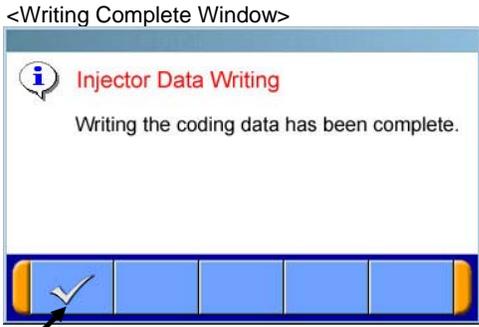

(1) Window 12

- Press OK button (Window 12: (1)) to proceed to the Result Display Window (Window 13).

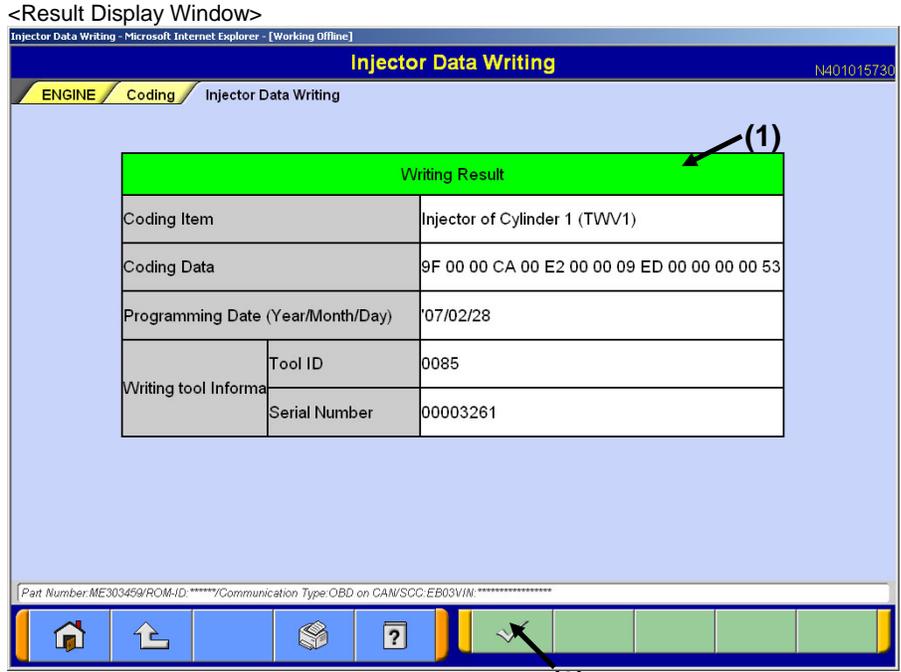

Window 13

- The writing result is displayed in Writing Result Window (Window 13: (1)) (See below).
 - (1) "Correction data" of injector
 - (2) Date when rewriting was performed
 - (3) ID of tool with which rewriting was performed (In case of MUT-III, "0085")
 - (4) Serial number of tool with which rewriting was performed (In case of MUT-III, serial number of V.C.I.)
- Press OK button (Window 13: (2)) to proceed to the Coding Submenu Window (Window 3).

<Model Information Display Window>

All Data Information - Microsoft Internet Explorer - [Working Offline]

N401015735

ENGINE Coding All Data Information

Vehicle Information

Coding Item	Coding Data	Programming Date (Year)	Writing tool Information	
			Tool ID	Serial Number
Injector of Cylinder 1 (TWW1)	9F 00 00 CA 00 E2 00 00 09 ED 00 00 00 00 53	'06/10/20	0085	00008338
Injector of Cylinder 2 (TWW5)	9F 2F 00 00 00 00 14 00 09 00 00 00 00 00 AD	'06/10/20	0085	00008338
Injector of Cylinder 3 (TWW3)	9F 00 00 00 00 00 17 00 1E 00 00 00 00 00 96	'06/10/20	0085	00008338
Injector of Cylinder 4 (TWW6)	9F 00 00 00 00 00 10 00 17 00 13 00 00 00 8B	'06/10/20	0085	00008338
Injector of Cylinder 5 (TWW2)	9F 2F 00 00 00 D8 00 00 00 E5 E3 00 00 00 41	'06/10/20	0085	00008338
Injector of Cylinder 6 (TWW4)	9F 2F 28 00 00 D6 18 00 15 00 00 00 00 00 43	'06/10/20	0085	00008338

Part Number ME303459/ROM-ID:*****/Communication Type:OBD on CAN/SCG:EB03

Navigation icons: Home, Back, Forward, Stop, Help, and a series of colored buttons.

Window 14

- The following information which is written in ECU is displayed.
 - (1) "Correction data" of injector
 - (2) Date when rewriting was performed.
 - (3) ID of tool with which rewriting was performed (In case of MUT-III, "0085")
 - (4) Serial number of tool with which rewriting was performed (In case of MUT-III, serial number of V.C.I.)