


SLD Limit Vehicle Speed Writing Procedure


<Function Select Window>

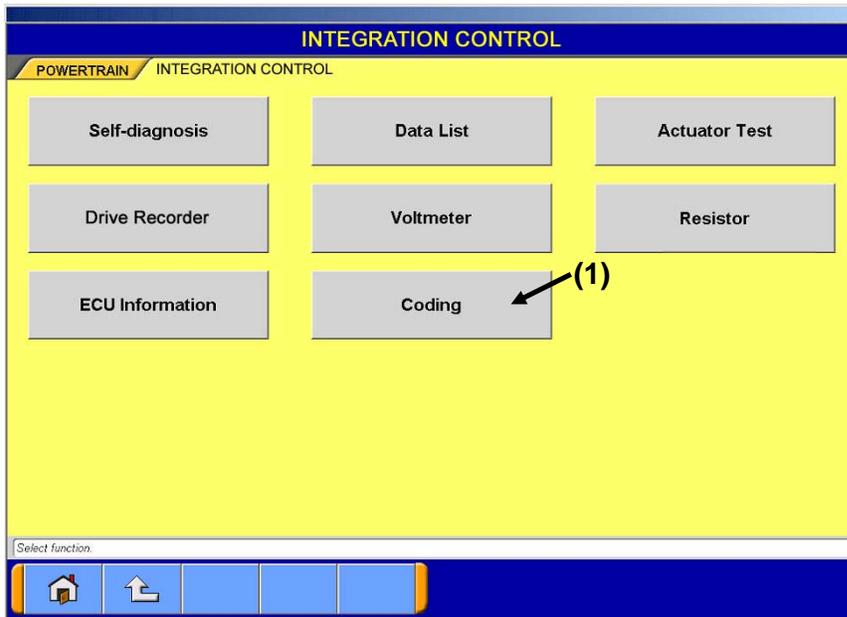

Window 1

- Press "Coding" button (Window 1: (1)) in Function Select Window to proceed to the Coding Menu Window (Window 2).


<Coding Menu Window>

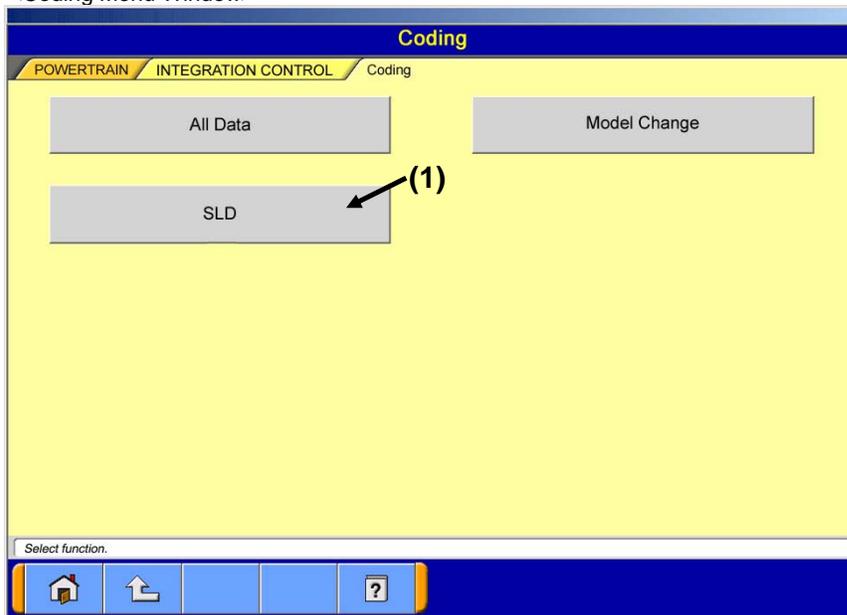

Window 2

- Press "SLD" button (Window 2: (1)) to proceed to the Coding Submenu Window (Window 3).

<Coding Submenu Window>

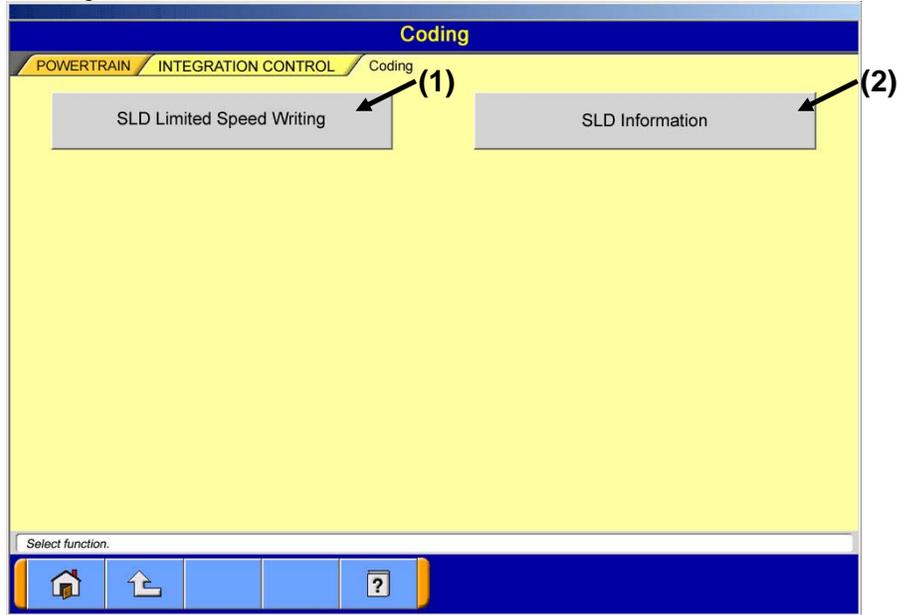


Window 3

· Press each Function button to proceed to the following windows.

Function button name	Next Window	Remarks
SLD Limited Speed Writing (Window 3: (1))	Password Input Window (Window 4)	Write "SLD limit vehicle speed" manually/ automatically.
SLD Information (Window 3: (2))	SLD Information Display Window (Window 13)	Confirm the SLD information (SLD limit vehicle speed, etc.) which is written in ECU.


<Password Input Window>

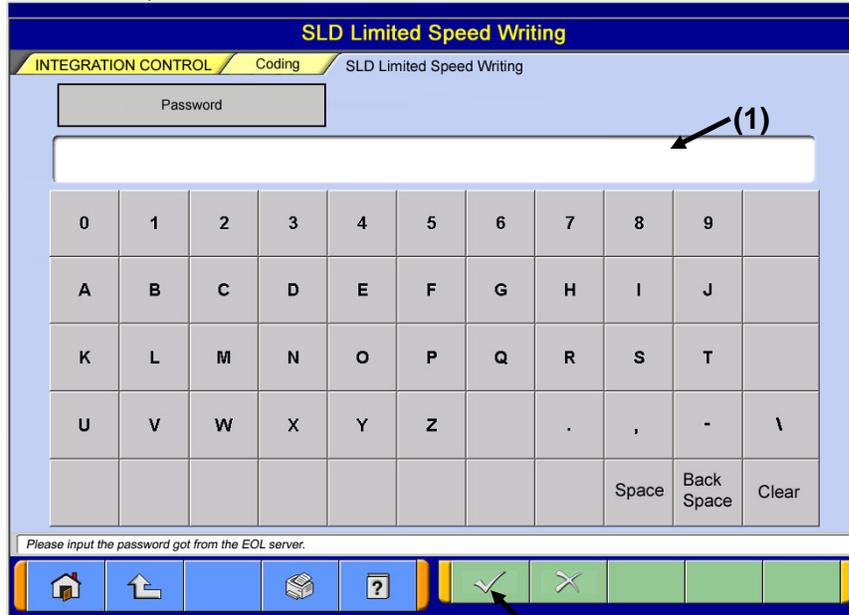

Window 4

- Enter password in Password Input field (Window 4: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 4: (2)) to proceed to the Inquiry Number Input Window (Window 5).


<Inquiry Number Input Window>

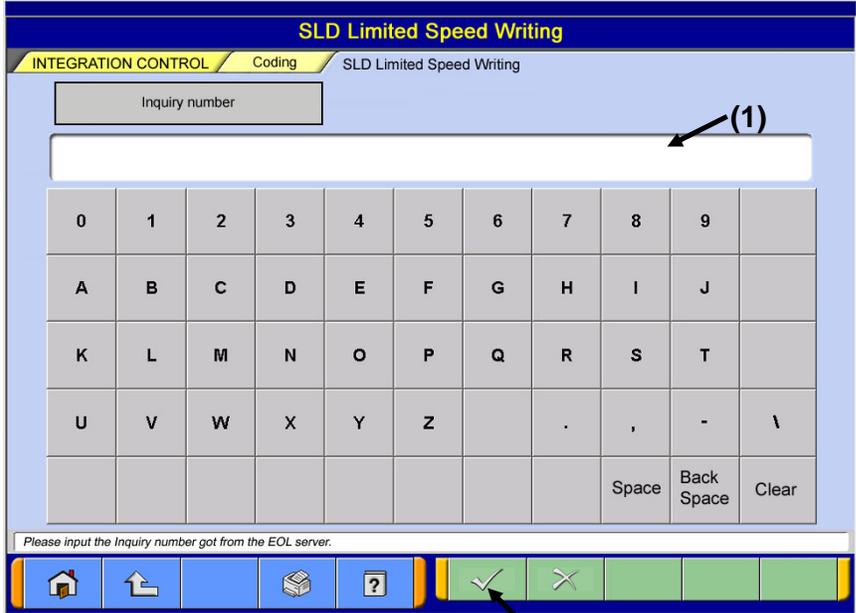

Window 5

- Enter inquiry number in Inquiry Number Input field (Window 5: (1)) from the keyboard of MUT Screen or PC main unit.
- Press OK button (Window 5: (2)) to proceed to the Data Input Method Select Window (Window 6).


<Data Input Method Select Window>

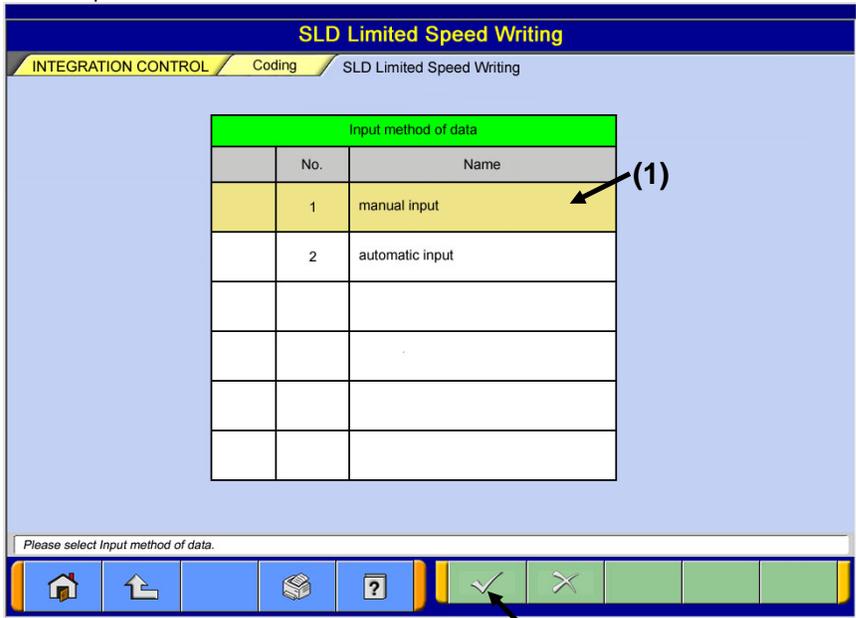

Window 6


- Select "Manual input" (Window 6: (1)) and press OK button (Window 6: (2)) to proceed to the Coding Data Input Window (Window 7).

<Coding Data Input Window>

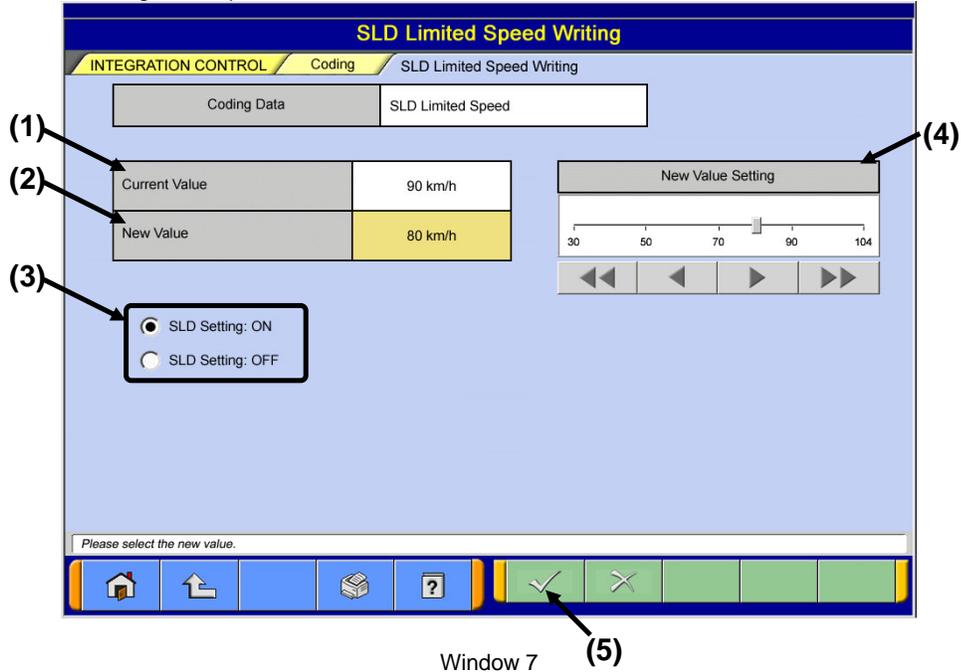


- The current value written in "Current Value" (Window 7: (1)) in ECU is displayed.
- A value written in "New Value" (Window 7: (2)) in ECU is displayed.
- Select SLD ON/OFF in "SLD Setting" (Window 7: (3)).
 - ON: Select SLD vehicle speed (30 km/h to 104 km/h) using the slider.
 - OFF: No limit vehicle speed (255 km/h)
- Select SLD vehicle speed using slider in "New Value Setting" (Window 7: (4)) and increase/decrease button.
- Press OK button (Window 7: (5)) to proceed to the Work Memo Input Window (Window 8).

<Work Memo Input Window>

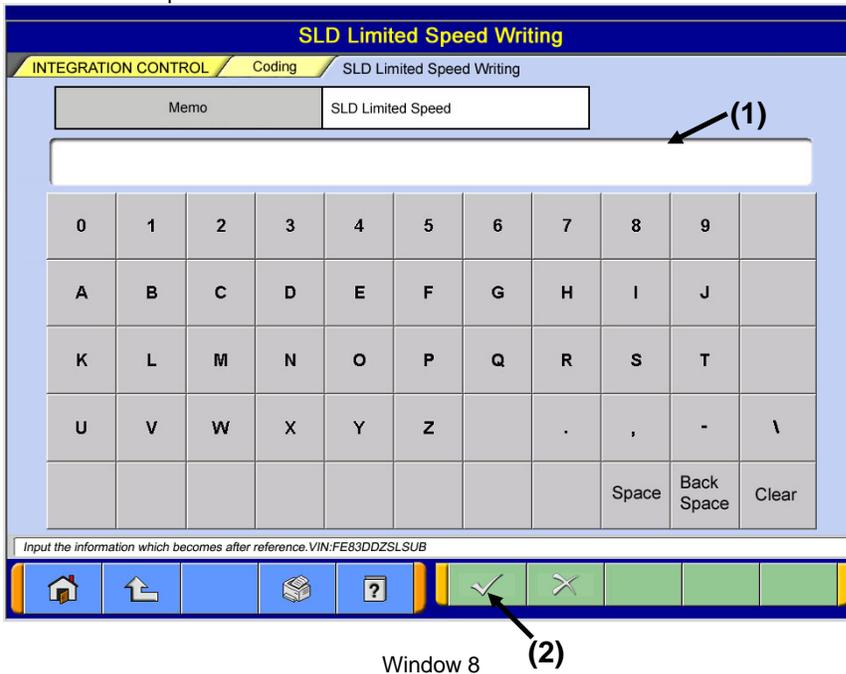

- Enter memo in Work Memo Input field (Window 8: (1)) from the keyboard of MUT Screen or PC main unit (It can be left blank).
- Press OK button (Window 8: (2)) to proceed to the Coding Contents Confirmation Window (Window 9).


<Coding Contents Confirmation Window>

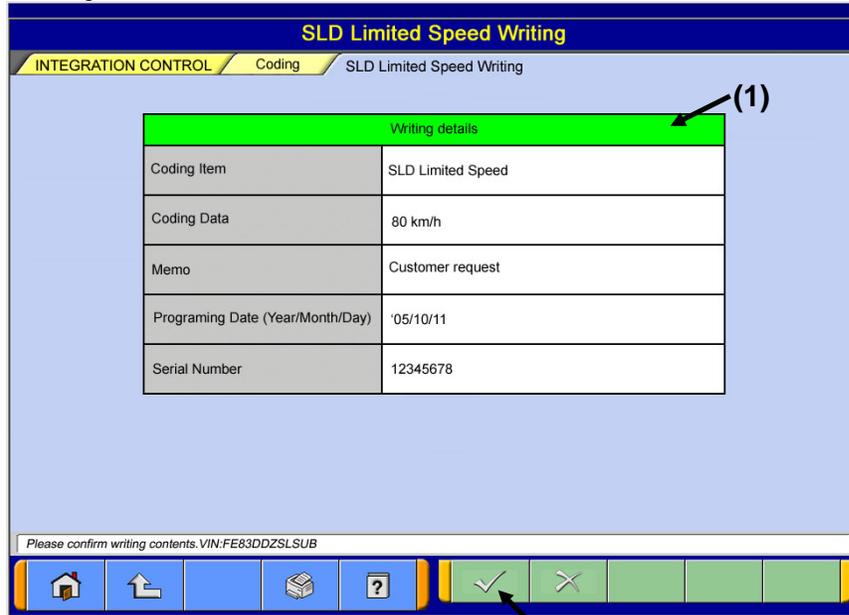

Window 9

- Confirm the writing contents (Window 9: (1)) and press OK button (Window 9: (2)) to display Now Writing Window (Window 10) after Writing Confirmation Window is displayed.


<Now Writing Window>

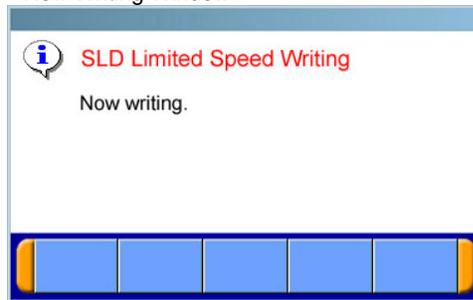

Window 10

- When writing is completed, Writing Complete Window (Window 11) is displayed.

<Wiring Complete Window>

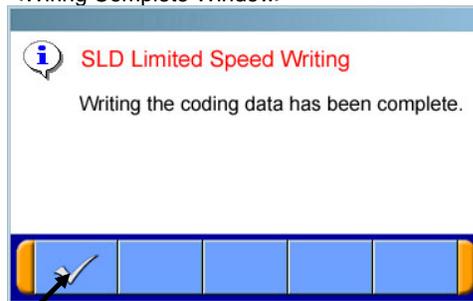


(1)

Window 11

- Press OK button (Window 11: (1)) to proceed to the Result Display Window (Window 12).


<Result Display Window>

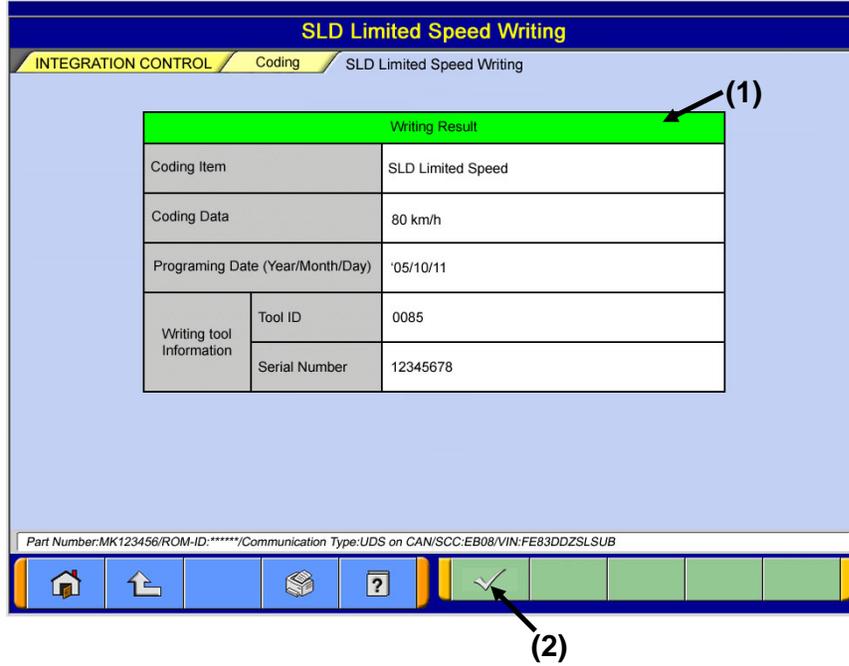

Window 12

- Writing result written in Writing Result (Window 12: (1)) is displayed.
- Press OK button (Window 12: (2)) to return to Coding Submenu Window (Window 3).

<SLD Information Display Window>

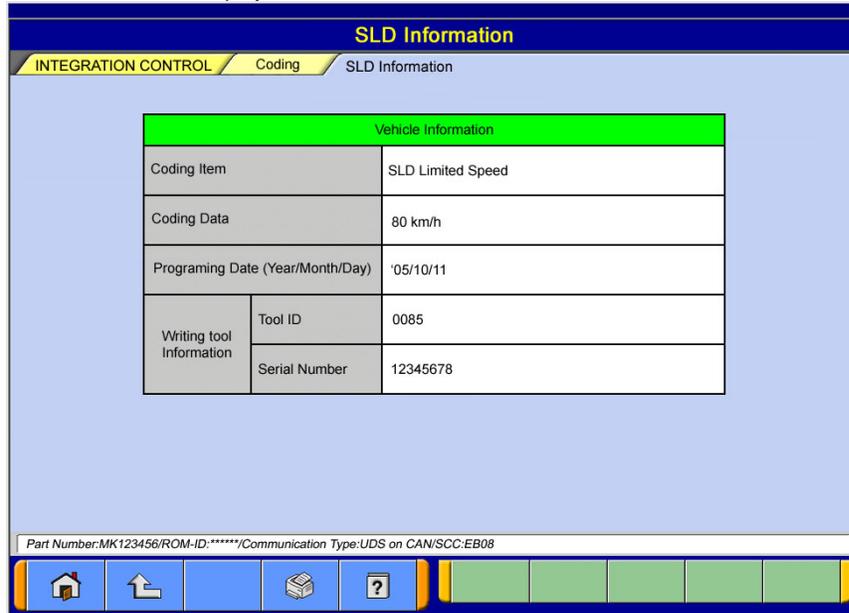

Window 13

- The value of "SLD limit vehicle speed" which is written in ECU is displayed.