

# STERLING 360™

## WORKSHOP MANUAL

### 2008 Model Year FOREWORD

This Workshop Manual contains maintenance and repair methods for the Sterling 360™. The purpose of this manual is to assist the service technician when the vehicle is serviced.

**IMPORTANT:** Descriptions and specifications in this manual were in effect at the time of printing. Freightliner LLC reserves the right to discontinue models, and to change specifications or design at any time without notice and without incurring obligation. Descriptions and specifications contained in this publication provide no warranty, express or implied, and are subject to revision and editions without notice. For additional information, please contact Freightliner LLC, Service Systems and Documentation, P.O. Box 3849, Portland, OR 97208-3849, U.S.A. or refer to <http://www.Freightliner.com> and <http://www.SterlingTrucks.com>.

Whenever you see instructions in this manual to discard materials, you should attempt to reclaim and recycle them. To preserve our environment, follow appropriate environmental rules and regulations when disposing of materials.

**NOTICE:** Do not replace suspension, axle, or steering parts (such as springs, wheels, hubs, and steering gears) with used parts. Used parts may have been subjected to collisions or improper use and have undetected structural damage.

© 2007 Freightliner LLC

All rights reserved. No part of this publication, in whole or in part, may be translated, reproduced, stored in a retrieval system, or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Freightliner LLC.

## GROUP INDEX

GENERAL .....	00
MAINTENANCE SCHEDULE .....	01
ENGINE.....	11
LUBRICATION.....	12
FUEL AND ENGINE CONTROL.....	13A
COMMON RAIL SYSTEM.....	13EA
AUTO CRUISE AND VEHICLE SPEED LIMITATION SYSTEM.....	13EB
ECU REWRITE AND PROGRAMMING.....	13ECU
COOLING.....	14
INTAKE AND EXHAUST .....	15
EMISSION CONTROL .....	17
AUTOMATIC TRANSMISSION.....	23
PROPELLER SHAFT .....	25
FRONT AXLE .....	26
REAR AXLE.....	27
WHEEL AND TIRE .....	31
FRONT SUSPENSION .....	33
REAR SUSPENSION.....	34
BRAKE.....	35A
ANTI-LOCK BRAKE SYSTEM (ABS) ....	35E
PARKING BRAKE .....	36
STEERING .....	37
BUMPER AND FRAME .....	41
CAB.....	42
DOOR.....	43
EXTERIOR .....	51
INTERIOR .....	52
ELECTRICAL.....	54
HEATER, AIR CONDITIONER, AND VENTILATION .....	55